

INSTALLATION AND OPERATION MANUAL



The LH25P/FM feature on board tones, the switch on the left hand side allows you to pick between:

 $\mathbf{F} = \text{Fog Horn} \quad \mathbf{W} = \text{Whistle} \quad \mathbf{S} = \text{Siren} \quad \mathbf{M} = \text{Microphone}$

Please note that the tones are post the volume control.

SPECIFICATIONS

Range	$0.5-0.7\ \mathrm{km}$ depending on operating conditions
Power	10 x C Type batteries
Weight	1.0 kg approx, excluding batteries

Operating Instructions

- 1 If using the LH25FM push the push-to-talk button on the hand held microphone, if using the LH25P use the push-to-talk button on the handle of the loudhailer.
- 2 Position the microphone in front of your mouth and the speaker towards the area you intend to address.
- 3 Talk at a normal volume with around 5cm gap between your mouth and the microphone.
- 4 Turn the volume control on either the hand held microphone or the unit its self to reach the optimum level.

To Replace Batteries

- 1 Unscrew the cap on the rear of the loudhailer.
- Remove the battery carriage.
- 3 Fill the carriage with 10 x C type batteries, ensuring that the batteries are inserted with the correct polarity.
- 4 Place the battery carriage back in the unit and screw the rear cap back on to the unit.



Address: 1 Clyde Street, Silverwater, Sydney NSW 2128 Australia. Private Bag 149, Silverwater NSW 1811 ABN 78 001 345 482 Website: www.australianmonitor.com.au International enquiries email: international@australianmonitor.com.au

DISTRIBUTED IN AUSTRALIA AND NEW ZEALAND BY HILLS SVL www.hillssvl.com.au

NSW P: 02 9647 1411 QLD P: 07 3852 1312 ACT P: 02 6260 4544 WA P: 08 9204 0200 VIC P: 03 9890 7477 SA P: 08 8408 8300 NZ P: 09 415 9426 E: nsw@hillssvl.com.au E: vic@hillssvl.com.au E: sa@hillssvl.com.au E: sales@hillssvl.co.nz