

# Avonic

# CM60-IPX-BOX

Full HD 20x zoom SDI Box Camera IP White



User Manual

Version 2.0

Update notes:

Join Avonic



E

linkedin.com/company/avonic

twitter.com/avonic





facebook.com/avonic





## Contents

Introduction	6
Congratulations	6
Safety Notes	6
Package contents	7
Accessories	7
Product Overview	8
Features	
Main Unit	9
Input and Output Description	9
Bottom Parts	9
Installation	
Connection Diagram	
Power adapter	
Operation	
OSD Menu	
MENU(Main Menu)	
EXPOSURE	
COLOR	
IMAGE	
FOCUS	
NOISE REDUCTION	
SETTING	





INFORMATION	
RESTORE FACTORY SETTINGS	
Serial Communication Control	
COM port settings	
Command List	18
	10
VLC stream media player monitoring	
Homepage introduction	
Media	
System Setting	
Network Setting	
Information	
Maintenance	27
Camera Maintenance	
Unqualified Application	
Troubleshooting	27
Image	
Control	
Contact	
Appendix A	29
VISCA Camera Command List	
VISCA Camera Control Command List	
VISCA Query Command List	
Pelco-D Protocol Command List	
Pelco-P Protocol Command List	





A	Appendix B Dimensions	57
	Inquiry Commands	53
	Camera control commands	47
	Camera return commands	45
	VISCA over IP commands	45



## Introduction

## Congratulations

Thank you for purchasing the Avonic CM60-IPX-BOX Integration HD Color Box Camera. Before beginning to operate this device, please read the manual in order to make sure the best performance is obtained. Save this manual for future reference.

## Safety Notes

- Installation and servicing should only be done by Qualified Service Personnel and conform to all local codes.
- This unit is designed for indoor use only and it must not be installed where exposed to water or other liquids and moisture.
- Before powering on the device, check the input power voltage carefully.
- Avoid shock and vibration when transporting and installing the device.
- Use wall mount brackets or ceiling mount brackets available at Avonic for safe installation.
- Electronic devices produce heat. Do not block the ventilation slots of the device and make sure the installation environment is well ventilated to avoid overheating.
- Before cleaning, unplug the power cable. Use a soft, damp cloth to clean the device, do not use strong or abrasive detergent to clean that will damage the device.
- If you wish to dispose this product, please contact Avonic to obtain info about the take-back procedure.





## Package contents

Quantity	Decription	Avonic SKU
1 pc	PTZ Camera	CM60-IPX-BOX
1 pc	Power Supply 12V/1A	CM-PSU-BOX

## Accessories



Wall Mount for CM60-IPX-BOX

Avonic SKU : CM-WMW-BOX







## **Product Overview**

The Avonic CM-series cameras are designed for fixed installations. Without concessions on quality, these cameras are an affordable choice for many installations. The cameras are equipped with a Panasonic CMOS sensor combined with a glass high-quality glass lens with 12x /20x /30x optical zoom. Control these cameras over RS232/485 with the Avonic CM-CON100 PTZ controller or any third party controller that supports VISCA, Pelco-P/D protocols.

These high-quality conference video cameras, with resolutions up to 1080p/60 and h.265 encoded ultra-low bandwidth video streams, have adopted Panasonic's HD CMOS sensor, which produces high-quality images. The high SNR (55db) of the CMOS sensor combined with 2D and 3D noise reduction algorithms, effectively reduce the noise, even under low light conditions. Supports HDMI, SDI and CVBS output with high effective transmission distances. Using RS232/485 interface all the parameters of the camera can be remote-controlled.

### Features

- 20x Optical Zoom. TAMRON high quality super telephoto lens.
- H.264 and H.265 Support, enabling full HD 1080p/60fps video stream by ultra-low bandwidth, lag-time within 200ms.
- 1080P Full HD, Panasonic's 1/2.7 inch, 2.07 million effective pixels high quality HD CMOS sensor.
- Double Interface, 3G-SDI interface and IP streaming at the same time.
- Ultra-high Frame Rate up to 60fps in 1080P or even up to 120fps output in 720P over IP only.
- AAC Audio Encoding, better sound quality and smaller bandwidth.
- Low-light, high SNR of CMOS sensor combined with 2D and 3D noise reduction algorithm, effectively reduce the noise, even under low illumination conditions.
- ICR Infrared Filter with auto switch, keep watch over day and night.







## Main Unit

#### Input and Output Description

- 1. 3G-SDI interface
- 2. RJ45 interface
- 3. Audio Line in interface
- 4. DC 12V power interface
- 5. Power light (flashing red when on)
- 6. Audio Line out interface
- 7. Right key
- 8. MENU key
- 9. Down key
- 10. Left key
- 11. Up key
- 12. RS485 interface



#### **Bottom Parts**

- 1 Camera Back Cover
- 2 Installation Positioning Track
- 3 Camera Front Cover
- 4 Lens Cap





## Installation

## **Connection Diagram**



### Power adapter

This equipment is equipped with a 12V/1A DC power supply. Insert the power supply according to the requirements. The Power LED is flashing red when turned on.





# Operation

## OSD Menu

Use the 5 keys on the back of the camera to control the OSD Menu.

#### MENU(Main Menu)

Directly press "MENU" button to enter the main menu.

MENU		
►	Exposure	
	Color	
	Image	
	Focus	
	Noise Reduction	
	Setting	
	Information	
	Restore Factory Settings	
	Exit	

Use the select key up and down. Choose a menu item, press [MENU] to enter submenu. Choose[Exit] press [MENU] to exit menu.







#### **EXPOSURE**

EXPOSURE		
►	Mode	Auto
	ExpCompMod	On
	ExpComp	-1
	GainLimit	3
	Backlight	Off
	DRC Strength	3
	Anti Flicker	50Hz
	Return	

- Mode: Set the camera exposure mode, Optional items: Auto, Bright, Iris Priority, Shutter Priority, Manual, WDR.
- Shutter: Set the Shutter values, only when the Mode for the Shutter Priority Mode and Manual Mode effective, Optional items: 1/10000s,1/6000s,1/4000s,1/3000s,1/2000s,1/1500s,1/1000s,1/725s,1/500s,1/350s,1/250s, 1/200s,1/125s,1/100s,1/90s,1/60s,1/30s.
- Iris: Set the Iris values, only when the Mode for the Iris Priority and Manual Mode effective, Optional items:F1.8,F2.0,F2.4,F2.8,F3.4,F4.0,F4.8,F5.6,F6.8,F8.0,F9.6,F11.0,Close
- GainLimit: Set the Gain value, Optional items: 0 ~ 15.
- Bright: Set the brightness values, only when the effective Mode for Bright Mode, Optional items: 0 ~ 17.
- ExpCompMode: Set the exposure compensation mode, can be installed: On, Off.
- ExpComp: Set the exposure compensation value, only when ExpCompMode item to On effective, Optional items: -7 ~ 7.
- Backlight: Set the backlight compensation, Optional items: On, Off.
- DRC Strength: Set up digital wide dynamic strength, can set up different levels of wide dynamic effect, Optional items: 0 ~ 8.





- Anti Flicker: Set the flashing function, Optional items: 50Hz, 60Hz, Off.
- DCRStrength: Set the DRC strength values, Optional items: 0 ~ 6.
- Return: get back

#### COLOR

COLOR		
►	WB Mode	Auto
	AWB Sens	Low
	RG Tuning	2
	BG Tuning	-1
	Saturation	100%
	Hue	7
	Return	

- WB Mode: Set the camera white balance mode, Optional items: Auto, 3000K/Indoor, 4000K, 5000K/Outdoor, 6500K-1, 6500K-2, 6500K-3,One Push, Manual.
- RGTuning: Adjust the camera white balance mode of red tuning, are effective only when the white balance mode to Auto, Optional items: -10 ~ 10.
- BGTuning: Adjust the camera white balance mode of blue tuning, are effective only when the white balance mode to Auto, Optional items: -10 ~ 10.
- R Gain: Adjust the camera white balance mode of red gain, are effective only when the white balance mode to Manual, Optional items: 0 ~ 255.
- B Gain: Adjust the camera white balance mode of blue gain, are effective only when the white balance mode to Manual, Optional items: 0 ~ 255.
- Saturation: Color saturation adjustment, Optional items: 60% ~ 200%.
- Hue: Chroma adjustment, Optional items:0 ~ 14.
- IR Filter: Choose IR Filter, Optional items: 1~ 3.





- AWB sens: The white balance sensitivity, Optional items: Low, Middle, High.
- Return: get back.

#### IMAGE

IMAGE		
	Luminance	7
	Contrast	7
	Sharpness	2
	Flip-H	Off
	Flip-V	Off
	Gamma	Default
	Style	Clarity
	Return	

- Luminance: Brightness adjustment, Optional items: 0~14.
- Contrast: Contrast adjustment, Optional items: 0~14.
- Sharpness: Sharpness adjustment, Optional items:Auto,0~15.
- Flip-H: Image flipped horizontally. Optional items: On, Off.
- Flip-V: Image Flip Vertical. Optional items: On, Off.
- Gamma: Optional items: default, 0.45, 0.5, 0.56, 0.63.
- Style: Optional items: Norm, Clarity, Bright, Soft,5S.
- Return: get back.





#### FOCUS

FOCUS		
►	D-Zoom Limit	x1
	AF Sensitivity	High
	Auto Focus	On

- Z-Doom Limit: Digital zoom camera settings, Optional items:x1.
- AF Sensitivity: Focus camera sensitivity, Optional items: Low, Middle, High.
- Auto Focus: Autofocus camera settings, Optional items: On, Off.
- Return: get back.

#### NOISE REDUCTION

NOISE REDUCTION			
►	2D NR	3	
	3D NR	3	

- 2D NR:2D noise reduction, Optional items:1 ~ 5,Close,Auto.
- 3D NR:3D noise reduction, Optional items:1 ~ 8,Close.
- Return: get back.





#### SETTING

SETTING		
►	Language	English
	Protocol	VISCA
	VISCA Address	1
	Baudrate	9600
	Video Format	1080P30
	Lens	Type2
	Return	

- Language: Language Settings, Optional items: English, Chinese.
- Protocol: Communication protocol Settings, Optional items: VISCA, PELCO-D, PELCO-P.
- VISCA Address: Address of the Visca Settings, Optional items: 0~7.
- P-D Address: P-D address settings, valid in PELCO-D mode, Optional items: 0~254.
- P-P Address: P-P address settings, valid in PELCO-P model, Optional items: 0~31.
- Baudrate: Camera baud rate settings, Optional items: 38400, 19200, 9600, 4800, 2400.
- Video Format: Camera video format settings, Optional items: 1080P60, 1080P50, 1080I60, 1080I50, 1080P30, 1080P25, 720P60, 720P50.
- Lens: Set lens type, Optional items: Type1, Type2.
- Return: get back.



#### INFORMATION

Information		
►	Version	7.2.01
	Data	2016-08-10
	AF Version	1.1.7
	IP	192.168.100.99
	Gateway	192.168.100.1
	Netmask	255.255.255.0
	Return	

#### **RESTORE FACTORY SETTINGS**

RESTORE FACTORY SETTINGS

Yes

No

- Yes: verify, press [MENU] to restore factory Settings.
- No: cancel, press [MENU] to back to menu.
- Return: get back.

### Serial Communication Control

#### COM port settings

RS485 Communication Control:

The camera can be controlled via RS485, Half-duplex mode:





- Baud rate: 2400/4800/9600 bit/s.
- Start bit: 1 bit.
- Data bit: 8 bits.
- Stop bit: 1bit.
- Parity bit: none.

#### **Command List**

The camera provides the following commands to control menu over RS-485:

function	command packet	Notes
UP	8x 01 06 01 08 08 03 01 FF	
DOWN	8x 01 06 01 08 08 03 02 FF	Equivalent to the back four direction keys.
LEFT	8x 01 06 01 08 08 01 03 FF	
RIGHT	8x 01 06 01 08 08 02 03 FF	
	8x 01 04 0B 02 FF	
ОК	or	Equivalent to the back 【MENU】 key.
	8x 01 04 0B 03 FF	

x:Camera VISCA address number.

For the complete VISCA command list, see Appendix A

### IP camera control

IP camera default IP address is

192.168.100.99,

user "admin",

password "admin"







After modified, IP Camera be restarted

Unknow camera IP, view as below:

Method 1: connect camera to TV, press [menu] of the behind camera, select "Information", the camera IP will be show on screen.

Change IP address,2 methods as below:

Method 1: On web control page, find "Network"--->Change IP---->Click "Apply"

#### ----> Restart camera



#### **TCP/UDP** Control

The Avonic IP camera is implemented with a TCP server inside. The default TCP port number is 5678. This number can be changed in the WebGUI in the Network Menu. Once the connection between client and server is set up, the client will be able to send VISCA PTZ commands to the server. The server then parses and executes the VISCA PTZ command.

The Avonic IP Camera has also implemented an UDP server inside. The UDP port number is 1259. This number cannot be changed. Once the connection between client and server is set up, the client will







be able to send VISCA PTZ commands to the server. The server then parses and executes the VISCA PTZ command.

The PTZ Command Format is according to the definition of the VISCA protocol. Not all VISCA commands are implemented for TCP/UDP control. The camera address is default set to 1. This number can be changed in the WebGUI in the Network Menu. The commands are listed in Appendix A.

#### VLC stream media player monitoring

Visit VLC media server procedure

Open VLC media player, click "Media"->"Open Network Steam ",or click "Ctrl+N"; as below:

Me	dia Playback Audio Video	Subtitle Tools
	Open File	Ctrl+O
	Open Multiple Files	Ctrl+Shift+O
	Open Folder	Ctrl+F
0	Open Disc	Ctrl+D
-	Open Network Stream	Ctrl+N
1	Open Capture Device	Ctrl+C
	Open Location from clipboard	Ctrl+V
	Open Recent Media	•
	Save Playlist to File	Ctrl+Y
	Convert / Save	Ctrl+R
((=))	Stream	Ctrl+S
	Quit at the end of playlist	
	Quit	Ctrl+Q

Input URL address:

rtsp://ip: port number/1 (First stream);

rtsp://ip: port number/2 (Second stream).

#### NOTE !

RTSP port number default value is 554.









#### Homepage introduction

Menu

All pages include 2 menu bars:

- 1. Real time monitoring: displaying video image
- 2. Parameter setup: with function buttons

#### Video viewing window

Video viewing window must be same as video resolution, the bigger the resolution is, the bigger the playing area is. Double click viewing window, will show full-screen, double click again, will return to initialized size.

1) Video playback pause button: control real-time video pause, stop the last picture, click recoverable video again.

2) Audio control buttons: can set silent mode.

3) Full screen switch button.

#### Language selection

Chinese/English/Russian





#### Media

Video Settings	
Video Format:	OSD 🔻
Encode Level:	mainprofile 🔻
First stream	
Encode Protocol:	H264 🔻
Resolution:	1920x1080 🔻
Bit Rate:	4096 (32~20480) kbps
Frame Rate:	25 🔻 fps
I Key Frame Interval:	25 (2~150)
Bit Rate Control:	● CBR ○ VBR
Fluctuate Level:	1 💌
Second stream	
Encode Protocol:	H264 🔻
Resolution:	320x240 🔻
Bit Rate:	1024 (32~6144) kbps
Frame Rate:	25 • fps
I Key Frame Interval:	25 (2~150)
Bit Rate Control:	● CBR ○ VBR
Fluctuate Level:	1 💌
	Apply Cancel

- 1. Video format Support 50HZ and 60HZ and OSD three formats.
- 2. Encode Protocol

Support H.264 and H.265 and MJPEG three formats.

- 3. Encode Level Support baseline, main profile, high profile.
- 4. Resolution

First stream support 1920x1080,1280x720, 1024x576,960x540,640x480,640x360,Second stream support 50Hz:1280x720,1024x576,720x576,

720x408,640x360,480x270,320x240,60Hz:1280x720,1024x576,720x480,720x408,640x360,48 0x270,320x240,

the bigger resolution is, the clearer the image will be, more network bandwidth will be taken.

5. Bit Rate







User can assign bit flow/stream, normally speaking, the bigger bit flow is, the clearer the image will be. The bit allocation must combine with network bandwidth, when the network bandwidth is too narrow and the allocated bit flow is too big, will cause video signal flow not to be transmitted normally, the video effect will be worse.

6. Frame rate

User can specify the size of the frame rate, generally, the frame rate greater, the image more smooth; Frame rate is smaller, the more you'll have the sense of a stuttering image.

7. I key frame interval:

Set interval between 2 I frame, the bigger interval is, the response will be lower from viewing window.

8. Bit Rate control

Code stream control way:

Constant bit rate: video coder will be coding according to preset speed

Variable bit rate: video coder will adjust the speed based on preset speed to gain the best image quality.

9. Fluctuate level

Restrain the fluctuation magnitude of variable rate, grade 1  $^{\sim}$  6

#### System Setting



Live	Initialize		
Video	Work Mode:	RTSP -	
Image	Reboot	Reboot	
Audio	User		
System	UserName:	admin	
Network	Passwd:		
Information			
		Apply	Cancel
Zoom In Zoom Out			
Focus In Focus Out			
Pan Speed 10 -			
Tilt Speed 10 -			
Zoom Speed 5 •			
Pocus speed 5			
Set Call			
Preset (0~254)			
Language English ·			

- 1. Work Mode Work Mode RTSP
- Reboot
   Click the "Reboot" button, system restart.
- User and password
   The user can modify the password (letters and Numbers only)
- 4. Apply / Cancel

Modify password and click the "apply" button to the login page, press "cancel" button to cancel password change.

#### **Network Setting**



Live	Lan Settings									
Video	IP Configuration Type:		Fixed	Fixed IP Address						
Image	IP Address:		192.	168.100.5	19					
Audio	Subnet Mask		255.3	255,255.0						
Sustem	Gateway		192.	168.100.1						
Network	DNS Address		192.	168,100.1						
Network	MAC Address		D4	- E0 -	RE   FB	A4	57			
mormacon			Apply		Cancel					
1.00			фріу		ounder					
	HTTP Port number	80	(80)							
	RTSP Port	554	(554)							
Zoom In Zoom Out	PTZ Port	5678	(5678)							
Easter in Court Cut	Control Protocol Settings	3070	(001.0)							
Pocus in Pocus Out	Visca Address:	1	(1-7)							
Zoom Speed 5 *	Pelco-D Address	0	(0-255)							
Focus Speed 5 .	Pelco-P Address	0	(0~31)							
Ret		-								
	First stream:	O On	o Off	- Vid	ieo 👘	Audio				
Preset (0~254)	MRL rtmp://192.168.100.138/live/stream0				_					
	Second stream	• On	• Off	- Vid	leo 🗔	Audio				
	MRL:	rtmp://	192.168.100	.138/live/	stream1					
	RTSP Settings									
	RTSP Auth	O On	e Off							
	ONVIFSettings									
	ONVIF.	O On	• Off							
	ONVIF Auth:	O On	• Off							
	Mulbeast Settings	-	10000							
	MURICASE	On	o Ou		10					
	Address.	224.1.2	.3		10					
Language English ·	POIL	0088								
			analy i		Concel					
			чрріў		Cancel					

1. Lan Settings

Default the IP address is 192.168.100.99, The MAC address can be modified.

- 2. Port Settings
  - a. HTTP Port IP address identifies the network device, the device can run multiple web applications, each network program using network port to transmit data, so data transmission to be carried out between the port and port. Port setting is to set up WEB SERVER program using which port to transmit. When port mapping, need to be consistent with the port number(default port: 80)
  - b. RTSP Port Network camera support RTSP protocol, use the VLC tools broadcast.
- c. PTZ Port Support PTZ protocol, default port: 5678.
- 3. Control Protocol Setting

Setting camera control communication protocol, include Visca address, Pelco-D address, Pelco-P address.

4. RTMP Setting

Setting the camera stream, can set up two stream, in the two stream selection control code stream of "On", "Off", "Video", "Audio", etc.

- RTSP Setting Setting network camera RTSP protocol of "On", "Off".
- ONVIF Setting Setting the ONVIF protocol and ONVIF authorization "On", "Off".
- Multicast Setting Setting multicast "On", "Off", and multicast address(default address 224.1.2.3) and





port(default 6688)

8. Apply / Cancel

Modify network parameters then press "Apply" button to modify network parameters, press "Cancel" button to cancel network parameters.

#### Information

Show the current device information, as shown to the right.

Information				
Device ID:	HD Camera			
Software Version:	SOC v7.2.00			
Device Type:	P3.V			
Webware Version:	v1.4.2			
	Apply Cancel			





## Maintenance

## Camera Maintenance

- If camera will not be used for a long time, disconnect AC power cord of AC adaptor to the outlet.
- Use soft cloth or tissue to clean the camera cover.
- Please use the soft dry cloth to clean the lens. If the camera is very dirty, clean it with diluted neuter detergent. Do not use any type of solvents, which may damages the surface.

### **Unqualified Application**

- No shooting extreme bright object for a long period of time, such as sunlight, light sources, etc.
- No operating in unstable lighting conditions, otherwise image will be flickering.
- No operating close to powerful electromagnetic radiation, such as TV or radio transmitters, etc.

## Troubleshooting

### Image

- No image
- 1. Check whether the power cord is connected, voltage is OK, POWER lamp is flashing red.
- 2. Check whether the camera can self-test after startup.
- 3. Check the BOTTOM switch and make sure the two switches are both set OFF.
- 4. Check video cable is connected correctly.
  - Abnormal display of image







Check video cable is connected correctly.

- Image dithering even at widest zoom position
- 1. Check whether camera is fixed correctly.

2. Make sure if there are something like vibration machine or other things nearby.

## Control

- Serial communication cannot control the camera
- 1. Check the camera working mode.
- 2. Check control cable is connected correctly.

## Contact

For any questions or suggestions, contact the reseller or the local distributor of Avonic. Find the local distributor on the website of Avonic.

For the recent manual or datasheet, look at the Avonic website.

www.avonic.eu





## Appendix A

## **VISCA Camera Command List**

x= Camera Address

y= Socket Number

z = Camera Address + 8

Command	Function	Command Package	Note
AddressSet	Broadcast	88 30 01 FF	Address setting
IF_Clear	Broadcast	88 01 00 01 FF	I/F Clear
CAM_Power	On	8x 01 04 00 02 FF	Power ON/OFF
			-
	Off	8x 01 04 00 03 FF	
CAM_Zoom	Stop	8x 01 04 07 00 FF	
	Tele(Standard)	8x 01 04 07 02 FF	-
	Wide(Standard)	8x 01 04 07 03 FF	-
	Tele(Variable)	8x 01 04 07 2p FF	p = 0(low) - 7(high)
			-
	Wide(Variable)	8x 01 04 07 3p FF	
	Direct	8x 01 04 47 0p 0q 0r 0s FF	pqrs: Zoom Position

Command	Function	Command Package	Note
ACK/Comletion	АСК	z0 4y FF	Return when the
Messages		(y: Socket No.)	command is accepted.





Completion	z0 5y FF	Return when the
	(v: Socket No.)	command has been
	()	executed.

Command	Function	Command Package	Note
Error Messages	Syntax Error	z0 60 02 FF	Returned when the command format is different or when a command with illegal command parameters is accepted.
	Command Buffer Full	z0 60 03 FF	Indicates that two sockets are already being used(executing two commands) and the command could not be accepted when received.
	Command Canceled	z0 6y 04 FF (y: Socket No.)	Returned when a command which is being executed in a socket specified by the cancel command is canceled. The completion message for the command is not returned.
	No Socket	z0 6y 05 FF (y: Socket No.)	Returned when no command is executed in a socket specifild by the cancel command, or when an invalid socket number is specified.
	Command Not Executable	z0 6y 41 FF (y: Execution command Socket No. Inquiry command: 0)	Returned when a command canot be executed due to current conditions.For example, when commands controlling the focus manually are received during auto focus.



## **VISCA Camera Control Command List**

Command	Function	Command Package	Notes
CAM_Focus	Stop	8x 01 04 08 00 FF	
	Far(Standard)	8x 01 04 08 02 FF	-
	Near(Standard)	8x 01 04 08 03 FF	-
	Far(Variable)	8x 01 04 08 2p FF	p = 0(low) - 7(high)
	Near(Variable)	8x 01 04 08 3p FF	-
	Direct	8x 01 04 48 0p 0q 0r 0s	pqrs: Focus Position
		FF	
	Auto Focus	8x 01 04 38 02 FF	AF On
	Manual Focus	8x 01 04 38 03 FF	AF Off
	Auto/Manual	8x 01 04 38 10 FF	AF Toggle On/Off
CAM_ZoomFocus	Direct	8x 01 04 47 0p 0q 0r 0s	pqrs: Zoom Position
		Ot Ou Ov Ow FF	p=0-4 qrs=0-F
			tuvw: Focus Position
CAM_WB	Auto	8x 01 04 35 00 FF	Normal Auto
	Indoor mode	8x 01 04 35 01 FF	Indoor mode
	Outdoor mode	8x 01 04 35 02 FF	Outdoor mode
	OnePush mode	8x 01 04 35 03 FF	One Push WB mode
	Manual	8x 01 04 35 05 FF	Manual Control mode
	OnePush trigger	8x 01 04 10 05 FF	One Push WB Trigger
CAM_RGain	Reset	8x 01 04 03 00 FF	Manual Control of R
	Up	8x 01 04 03 02 FF	Gain
	Down	8x 01 04 03 03 FF	-





	Direct	8x 01 04 43 00 00 0p	pq: R Gain	
		Oq FF		
CAM_Bgain	Reset	8x 01 04 04 00 FF	Manual Control of B	
	Up	8x 01 04 04 02 FF	- Gain	
	Down	8x 01 04 04 03 FF	-	
	Direct	8x 01 04 44 00 00 0p	pq: B Gain	
		Oq FF		
CAM_AE	Full Auto	8x 01 04 39 00 FF	Automatic Exposure mode	
	Manual	8x 01 04 39 03 FF	Manual Control mode	
	Shutter priority	8x 01 04 39 0A FF	Shutter Priority	
			Automatic Exposure	
			mode	
	Iris priority	8x 01 04 39 0B FF	Iris Priority Automatic	
			Exposure mode	
	Bright	8x 01 04 39 0D FF	Bright Mode(Manual control)	
CAM_SlowShutter	AutoSlowShutterLimit	8x 01 04 2A 0p 00 FF		
CAM_Iris	Reset	8x 01 04 0B 00 FF	Iris Setting	
	Up	8x 01 04 0B 02 FF	-	
	Down	8x 01 04 0B 03 FF	-	
	Direct	8x 01 04 4B 00 00 0p	pq: Iris Position	
		Oq FF		
CAM_Gain	Reset	8x 01 04 0C 00 FF	Gain Setting	
	Up	8x 01 04 0C 02 FF	-	
	Down	8x 01 04 0C 03 FF	-	
	Direct	8x 01 04 0C 00 00 0p 0q FF	pq: Gain Position	
	Gain Limit	8x 01 04 2C 0p FF	p: Gain Position	





CAM_Bright	Reset	8x 01 04 0D 00 FF	Bright Setting
	Up	8x 01 04 0D 02 FF	-
	Down	8x 01 04 0D 03 FF	-
	Direct	8x 01 04 0D 00 00 0p 0q FF	pq: Bright Position
CAM_ExpComp	On	8x 01 04 3E 02 FF	Exposure
	Off	8x 01 04 3E 03 FF	<ul> <li>Compensation On/Off</li> </ul>
	Reset	8x 01 04 0E 00 FF	Exposure
	Up	8x 01 04 0E 02 FF	<ul> <li>Compensation Amount</li> <li>Setting</li> </ul>
	Down	8x 01 04 0E 03 FF	
	Direct	8x 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position
CAM_BackLight	On	8x 01 04 33 02 FF	Back Light
	Off	8x 01 04 33 03 FF	<ul> <li>Compensation On/Off</li> </ul>
CAM_NR(2D)Mode	Auto	8x 01 04 50 02 FF	ND2D Auto/Manual
	Manual	8x 01 04 50 03 FF	-
CAM_NR(2D)Level	-	8x 01 04 53 0p FF	p: NR Setting (0: Off, level 1 to 5)
CAM_NR(3D)Level	-	8x 01 04 54 0p FF	p: NR Setting (0: Off, level 1 to 8)
CAM_Flicker	-	8x 01 04 23 0p FF	p: Flicker Settings
			(0: Off, 1: 50Hz, 2: 60Hz)
CAM_DHotPixel	-	8x 01 04 56 0p FF	p: Dynamic Hot Pixel Setting (0: Off, level 1 to 6)
CAM_ApertureMode	Auto	8x 01 04 05 02 FF	Sharpness Auto
(sharpness)	Manual	8x 01 04 05 02 FF	Sharpness Manual
	Reset	8x 01 04 02 00 FF	Aperture Control





CAM_Aperture	Up	8x 01 04 02 02 FF	
(sharpness)	Down	8x 01 04 02 03 FF	-
	Direct	8x 01 04 42 00 00 0p	pq: Aperture Gain
		0q FF	
CAM_PictureEffect	Off	8x 01 04 63 00 FF	Picture Effect Setting
	B&W	8x 01 04 63 04 FF	-
CAM_Memory	Reset	8x 01 04 3F 00 pp FF	pp: Memory
	Set	8x 01 04 3F 01 pp FF	- Number(=0 to 127)
	Recall	8x 01 04 3F 02 pp FF	-
CAM_LR_Reverse	On	8x 01 04 61 02 FF	Image Flip Horizontal
	Off	8x 01 04 61 03 FF	Un/Uff
CAM_PictureFlip	On	8x 01 04 66 02 FF	Image Flip Vertical
	Off	8x 01 04 66 03 FF	- On/Off
CAM_RegisterValue	-	8x 01 04 24 mn 0p 0q FF	mm: Register No. (=00- 7F) pp: Register Value
			(=00-7F)
CAM_ColorGain	Diret	8x 01 04 49 00 00 00	p: Color Gain setting
		0011	
			-200%
SYS_Menu	Off	8x 01 06 06 03 FF	Turns off the menu
			screen
Pan_tiltDrive	Up	8x 01 06 01 VV WW 03	VV: Pan speed 0x01
		01 FF	(low speed) to 0x18
	Down	8x 01 06 01 VV WW 03	(high speed)
		02 FF	
	Left	8x 01 06 01 VV WW 01	WW: Tilt speed 0x01
		03 FF	(low speed) to 0x14
	Right	8x 01 06 01 VV WW 02 03 FF	(high speed)

	Upleft	8x 01 06 01 VV WW 01 01 FF	YYYY: Pan Position
	Upright	8x 01 06 01 VV WW 02 01 FF	ZZZZ: Tilt Position
	DownLeft	8x 01 06 01 VV WW 01 02 FF	
	DownRight	8x 01 06 01 VV WW 02 02 FF	
	Stop	8x 01 06 01 VV WW 03 03 FF	
	AbsolutePosition	8x 01 06 02 VV WW 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition	8x 01 06 03 VV WW v0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Ноте	8x 01 06 04 FF	
	Reset	8x 01 06 05 FF	
Pan_tiltLimitSet	LimitSet	8x 01 06 07 00 0W 0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	W: 1 UpRight 0: DownLeft YYYY: Pan Limit Position
	LimitClear	8x 01 06 07 01 0W 07 OF 0F 0F 07 0F 0F 0F FF	ZZZZ: Tilt Position
CAM_AFSensitivity	High	8x 01 04 58 01 FF	AF Sensitivity
	Normal	8x 01 04 58 02 FF	- High/Normal/Low
	Low	8x 01 04 58 03 FF	-
CAM_SettingReset	Reset	8x 01 04 A0 10 FF	Reset Factory Setting
CAM_Brightness	Direct	8x 01 04 A1 00 00 0p 0q FF	pq: Brightness Position





CAM_FlipOff8x 01 04 A4 00 FFFlip-H8x 01 04 A4 01 FFFlip-V8x 01 04 A4 02 FFFlip-HV8x 01 04 A4 03 FFSingle Command For Video FlipCAM_SettingSaveSaveSave8x 01 04 A5 10 FF	CAM_Contrast	Direct	8x 01 04 A2 00 00 0p	pq: Contrast Position
CAM_FlipOff8x 01 04 A4 00 FFFlip-H8x 01 04 A4 01 FFFlip-V8x 01 04 A4 02 FFFlip-HV8x 01 04 A4 03 FFSingle Command For Video FlipCAM_SettingSaveSaveSave8x 01 04 A5 10 FFSave Current Setting			oq II	
Flip-H       8x 01 04 A4 01 FF         Flip-V       8x 01 04 A4 02 FF         Flip-HV       8x 01 04 A4 03 FF         Single Command For Video Flip         CAM_SettingSave       Save         Save       8x 01 04 A5 10 FF	CAM_Flip	Off	8x 01 04 A4 00 FF	
Flip-V       8x 01 04 A4 02 FF         Flip-HV       8x 01 04 A4 03 FF       Single Command For Video Flip         CAM_SettingSave       Save       8x 01 04 A5 10 FF       Save Current Setting		Flip-H	8x 01 04 A4 01 FF	-
Flip-HV       8x 01 04 A4 03 FF       Single Command For         Video Flip       Video Flip         CAM_SettingSave       Save       8x 01 04 A5 10 FF       Save Current Setting		Flip-V	8x 01 04 A4 02 FF	-
CAM_SettingSave       Save       8x 01 04 A5 10 FF       Save Current Setting		Flip-HV	8x 01 04 A4 03 FF	Single Command For
CAM_SettingSave     Save     8x 01 04 A5 10 FF     Save Current Setting				Video Flip
	CAM_SettingSave	Save	8x 01 04 A5 10 FF	Save Current Setting
CAM_IridixDirect8x 01 04 A7 00 00 0ppq: Iridix Position	CAM_Iridix	Direct	8x 01 04 A7 00 00 0p	pq: Iridix Position
Oq FF			Oq FF	
CAM_AWBSensitivit yHigh8x 01 04 A9 00 FFHigh	CAM_AWBSensitivit y	High	8x 01 04 A9 00 FF	High
Normal 8x 01 04 A9 01 FF Normal		Normal	8x 01 04 A9 01 FF	Normal
Low 8x 01 04 A9 02 FF Low		Low	8x 01 04 A9 02 FF	Low
CAM_AFZoneTop8x 01 04 AA 00 FFAF Zone weight select	CAM_AFZone	Тор	8x 01 04 AA 00 FF	AF Zone weight select
Center 8x 01 04 AA 01 FF		Center	8x 01 04 AA 01 FF	-
Bottom 8x 01 04 AA 02 FF		Bottom	8x 01 04 AA 02 FF	-
CAM_ColorHueDirect8x 01 04 4F 00 00 00p: Color Hue setting 0h	CAM_ColorHue	Direct	8x 01 04 4F 00 00 00	p: Color Hue setting Oh
Op FF (- 14 dgrees) to Eh (			Op FF	(– 14 dgrees) to Eh (
+14 degrees				+14 degrees

## **VISCA Query Command List**

Command	Command Package	Return Package	Note
CAM_PowerInq	8x 09 04 00 FF	y0 50 02 FF	On
		y0 50 03 FF	Off(Standby)
		y0 50 04 FF	Internal power circuit
			error
CAM_ZoomPosInq	8x 09 04 47 FF	y0 50 0p 0q 0r 0s FF	pqrs: Zoom Position





CAM_FocusAFMode	8x 09 04 38 FF	y0 50 02 FF	Auto Focus
Inq		y0 50 03 FF	Manual Focus
CAM_FocusPosInq	8x 09 04 48 FF	y0 50 0p 0q 0r 0s FF	pqrs: Focus Position
CAM_WBModeInq	8x 09 04 35 FF	y0 50 00 FF	Auto
		y0 50 01 FF	Indoor mode
		y0 50 02 FF	Outdoor mode
		y0 50 03 FF	OnePush mode
		y0 50 05 FF	Manual
CAM_RGainInq	8x 09 04 43 FF	y0 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	8x 09 04 44 FF	y0 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModeInq	8x 09 04 39 FF	y0 50 00 FF	Full Auto
		y0 50 03 FF	Manual
		y0 50 0A FF	Shutter priority
		y0 50 0B FF	Iris priority
		y0 50 0D FF	Bright
CAM_ShutterPosInq	8x 09 04 4A FF	y0 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	8x 09 04 4B FF	y0 50 00 00 0p 0q FF	pq: Iris Position
CAM_BrightPosInq	8x 09 04 4D FF	y0 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompMod	8x 09 04 3E FF	y0 50 02 FF	On
eInq		y0 50 03 FF	Off
CAM_ExpCompPosl nq	8x 09 04 4E FF	y0 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BacklightMode	8x 09 04 33 FF	y0 50 02 FF	On
Inq		y0 50 03 FF	Off
CAM_Nosise2DMode	8x 09 04 50 FF	y0 50 02 FF	Auto Noise 2D
Ing		y0 50 03 FF	Manual Noise 3D





CAM_Nosise2DLevel	8x 09 04 53 FF	y0 50 0p FF	Noise Reduction (2D) p: 0 to 5
CAM_Noise3DLevel	8x 09 04 54 FF	y0 50 0p FF	Noise Reduction (3D) p: 0 to 8
CAM_FlickerModeIn q	8x 09 04 55 FF	y0 50 0p FF	p: Flicker Settings(0: OFF, 1: 50Hz, 2:
			60Hz)
CAM_ApertureModel	8x 09 04 05 FF	y0 50 02 FF	Auto Sharpness
nq(Snarpness)		y0 50 03 FF	Manual Sharpness
CAM_ApertureInq(Sh arpness)	8x 09 04 42 FF	y0 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffectM	8x 09 04 63 FF	y0 50 02 FF	Off
odelnq		y0 50 04 FF	B&W
CAM_MemoryInq	8x 09 04 3F FF	y0 50 0p FF	p: Memory number last operated.
SYS_MenuModeInq	8x 09 06 06 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_LR_ReverseInq	8x 09 04 61 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_PictureFlipInq	8x 09 04 66 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
CAM_RegisterValuel nq	8x 09 04 24 mm FF	y0 50 0p 0p ff	mm: Register No. (00 to FF) pp: Register
			Value (00 to FF)
CAM_ColorGainInq	8x 09 04 49 FF	y0 50 00 00 00 0p FF	p: Color Gain setting Oh (60%) to Eh
			(200%)
CAM_IDInq	8x 09 04 22 FF	y0 50 0p 0q 0r 0s FF	pqrs: Camera ID





CAM_VersionInq	8x 09 00 02 FF	y0 50 ab cd mn pq rs tu	ab: Factory Code
		vw FF	cd: Hardware Version
			mnpq: ARM Version
			rstu: FPGA Version
			vw: Camera model
			01: С Туре
			02: M Type
			03: S Туре
VideoSystemInq	8x 09 06 23 FF	y0 50 00 FF	1920x1080i60
		y0 50 01 FF	1920x1080p30
		y0 50 02 FF	1280x720p60
		y0 50 04 FF	NTSC
		y0 50 05 FF	NTSC
		y0 50 06 FF	NTSC
		y0 50 07 FF	1920x1080p60
		y0 50 08 FF	1920x1080i50
		y0 50 09 FF	1920x1080p25
		y0 50 0A FF	1280x720p50
		y0 50 0C FF	PAL
		y0 50 0D FF	PAL
		y0 50 0E FF	PAL
IR_Receive	8x 09 06 08 FF	y0 50 02 FF	On
		y0 50 03 FF	Off
Pan-tiltMaxSpeedInq	8x 09 06 11 FF	y0 50 ww zz FF	ww: Pan Max Speed zz:
			Tilt Max Speed
Pan-tiltPosInq	8x 09 06 12 FF	y0 50 0w 0w 0w 0w	wwww: Pan Position
		Oz Oz Oz Oz FF	ZZZZ: THE POSITION





CAM_TypeInq	8x 09 00 03 FF	y0 50 01 FF	С Туре
		y0 50 02 FF	М Туре
		y0 50 03 FF	S Туре
CAM_DateInq	8x 09 00 04 FF	y0 50 0r ss uu uu vv ww	Version dater: Big
		0D FF	Version Numberss:
			Little Version
			Numberuuuu: Yearvv:
			Monthww: Day
CAM_ModeInq	8x 09 04 A6 FF	y0 50 00 FF	Mode0
		y0 50 02 FF	Mode2
CAM_GainLimitInq	8x 09 04 2C FF	y0 50 0q FF	p: Gain Limit
CAM_DHotPixelInq	8x 09 04 56 FF	y0 50 0q FF	p: Dynamic Hot Pixel
			Setting (0: Off, level 1 to
			6)
CAM_AFSensitivityl nq	8x 09 04 58 FF	y0 50 01 FF	High
		y0 50 02 FF	Normal
		y0 50 03 FF	Low
CAM_BrightnessInq	8x 09 04 A1 FF	y0 50 00 00 0p 0q FF	pq: Brightness Position
CAM_ContrastInq	8x 09 04 A2 FF	y0 50 00 00 0p 0q FF	pq: Contrast Position
CAM_FlipInq	8x 09 04 A4 FF	y0 50 00 FF	Off
		y0 50 01 FF	Flip-H
		y0 50 02 FF	Flip-V
		y0 50 03 FF	Flip-HV
CAM_IridixInq	8x 09 04 A7 FF	y0 50 00 00 0p 0q FF	pq: Iridix Position
CAM_AFZone	8x 09 04 AA FF	y0 50 00 FF	Тор
		y0 50 01 FF	Center
		y0 50 02 FF	Bottom





CAM_ColorHueInq	8x 09 04 4F FF	y0 50 00 00 00 0p FF	p: Color Hue setting Oh (– 14 dgrees) to
			Eh ( +14 degrees
CAM_AWBSensitivit yInq	8x 09 04 A9 FF	y0 50 00 FF	High
		y0 50 01 FF	Normal
		y0 50 02 FF	Low

Command	Command Package	Return Package	Note
CAM_LensBlockInq	8x 09 7E 7E 00 FF	y0 50 0u 0u 0u 0u 00 00 Ov 0v	uuuu: Zoom Position vvvv: Focus Position
		0v 0v 00 0w 00 FF	w.bit0: Focus Mode 1: Auto 0: Manual
CAM_CameraBlockInq	8x 09 7E 7E 01 FF	y0 50 0p 0p 0q 0q 0r 0s	pp: R_Gain
		tt Ou vv ww OO xx Oz FF	qq: B_Gain
			r: WB Mode
			s: Aperture
			tt: AE Mode
			uu: BackLight
			uu Exp Comp.
			vv: Shutter Position
			ww: Iris Position
			xx Bright Position
			z: Exp Comp. Position
CAM_OtherBlockInq	8x 09 7E 7E 02 FF	y0 50 0p 0q 00 0r 00 00 00 00	p.bit0: Power 1:On, 0:Off
		00 00 00 00 00 FF	q.bit2: LR Reverse 1:On, 0:Off
			r.bit3~0: Picture Effect Mode





CAM_EnlargementBl	8x 09 7E 7E 03 FF	y0 50 00 00 00 00 00 00 00 00 0p	p: AF sensitivity
оскіпф			q: bit0: Picture
		Oq rr Os Ot Ou FF	flip(1:On, 0:Off)
			rr.bit6~3: Color Gain
			(0h(60%) to Eh(200%))
			s: Flip(0: Off, 1:Flip-H,
			2:Flip-V, 3:Flip-HV)
			t: bit2~0: NR2D level
			u: Gain limit

Remark :

1. [x] in the above list refer to the camera address,

[y] = [x + 8]



## **Pelco-D Protocol Command List**

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Up	0xFF	Address	0x00	0x08	Pan Speed	Tilt Speed	SUM
Down	0xFF	Address	0x00	0x10	Pan Speed	Tilt Speed	SUM
Left	0xFF	Address	0x00	0x04	Pan Speed	Tilt Speed	SUM
Right	0xFF	Address	0x00	0x02	Pan Speed	Tilt Speed	SUM
Zoom In	0xFF	Address	0x00	0x20	0x00	0x00	SUM
Zoom Out	0xFF	Address	0x00	0x40	0x00	0x00	SUM
Focus Far	0xFF	Address	0x00	0x80	0x00	0x00	SUM
Focus Near	0xFF	Address	0x01	0x00	0x00	0x00	SUM
Set Preset	0xFF	Address	0x00	0x03	0x00	Preset ID	SUM
Clear Preset	0xFF	Address	0x00	0x05	0x00	Preset ID	SUM
Call Preset	0xFF	Address	0x00	0x07	0x00	Preset ID	SUM
Auto Focus	0xFF	Address	0x00	0x2B	0x00	0x01	SUM
Manual Focus	0xFF	Address	0x00	0x2B	0x00	0x02	SUM
Query Pan Position	0xFF	Address	0x00	0x51	0x00	0x00	SUM
Query Pan Position	0xFF	Address	0x00	0x59	Value High	Value Low	SUM
Response					Byte	Byte	
Query Tilt Position	0xFF	Address	0x00	0x53	0x00	0x00	SUM
Query Tilt Position	OxFF	Address	0x00	0x5B	Value High	Value Low	SUM
Response					Byte	Byte	
Query Zoom Position	0xFF	Address	0x00	0x55	0x00	0x00	SUM
Query Zoom Position	<b>OxFF</b>	Address	0x00	0x5D	Value High	Value Low	SUM
Response					Byte	Byte	

## **Pelco-P Protocol Command List**

Function	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Up	0xA0	Address	0x00	0x08	Pan Speed	Tilt Speed	0xAF	XOR
Down	0xA0	Address	0x00	0x10	Pan Speed	Tilt Speed	0xAF	XOR
Left	0xA0	Address	0x00	0x04	Pan Speed	Tilt Speed	0xAF	XOR
Right	0xA0	Address	0x00	0x02	Pan Speed	Tilt Speed	0xAF	XOR
Zoom In	0xA0	Address	0x00	0x20	0x00	0x00	0xAF	XOR
Zoom Out	0xA0	Address	0x00	0x40	0x00	0x00	0xAF	XOR
Focus Far	0xA0	Address	0x00	0x80	0x00	0x00	0xAF	XOR
Focus Near	0xA0	Address	0x01	0x00	0x00	0x00	0xAF	XOR
Set Preset	0xA0	Address	0x00	0x03	0x00	Preset ID	0xAF	XOR
Clear Preset	0xA0	Address	0x00	0x05	0x00	Preset ID	0xAF	XOR
Call Preset	0xA0	Address	0x00	0x07	0x00	Preset ID	0xAF	XOR
Auto Focus	0xA0	Address	0x00	0x2B	0x00	0x01	0xAF	XOR
Manual Focus	0xA0	Address	0x00	0x2B	0x00	0x02	0xAF	XOR
Query Pan Position	0xA0	Address	0x00	0x51	0x00	0x00	0xAF	XOR
Query Pan Position	0xA0	Address	0x00	0x59	Value High	Value Low	0xAF	XOR
Response					Byte	Byte		
Query Tilt Position	0xA0	Address	0x00	0x53	0x00	0x00	0xAF	XOR
Query Tilt Position	0xA0	Address	0x00	0x5B	Value High	Value Low	0xAF	XOR
Response					Byte	Byte		
Query Zoom Position	0xA0	Address	0x00	0x55	0x00	0x00	0xAF	XOR
Query Zoom Position Response	0xA0	Address	0x00	0x5D	Value High Byte	Value Low Byte	0xAF	XOR

## **VISCA over IP commands**

The Avonic CM60-IP camera is implemented with a TCP server. The TCP port number is 5678 by default and can be altered in the WebGUI. Once the connection between client and server is set up, the client will be able to send PTZ commands to the server. The server then parses and executes the PTZ command.

The Avonic IP Camera has also implemented a UDP server. The UDP port number is fixed on 1259. Once the connection between client and server is set up, the client will be able to send PTZ commands to the server. The server then parses and executes the PTZ command.

The VISCA over IP command list is based on the VISCA protocol. Not all VISCA commands are implemented.

The PTZ Command format is according to the definition of the VISCA protocol. The VISCA address of the camera is set to 1 by default and can be changed in the WebGUI. As all cameras are uniquely identified by their IP address, all VISCA addresses of the cameras that are controlled over IP do not necessarily have to be unique.

Default settings:

- TCP port 5678
- UDP port 1259

VISCA address 1

The commands are as follow:

#### Camera return commands

x= Camera Address

y= Socket Number



z = Camera Address + 8

All parameter values are in HEX

Return/complete	Command		
Command	Function	Command Packet	Comments
ACK/Comletion	ACK	90 4y FF	Return when the command is
Messages		(y: Socket No.)	accepted.
	Completion	90 5y FF	Return when the command has
		(y: Socket No.)	been executed.

<b>F</b>		
Error	com	mano
_		

Command	Function	Command Packet	Comments
Error Messages	Syntax Error	90 60 02 FF	Returned when the command
			format is different or when a
			command with illegal command
			parameters is accepted.
	Command Buffer Full	90 60 03 FF	Indicates that two sockets are
			already being used(executing two
			commands) and the command
			could not be accepted when
			received.
	Command Canceled	90 6y 04 FF	Returned when a command
		(y: Socket No.)	which is being executed in a
			socket specified by the cancel
			command is canceled. The
			completion message for the
			command is not returned.
	No Socket	90 6y 05 FF	Returned when no command is
		(y: Socket No.)	executed in a socket specified by
			the cancel command, or when an





			invalid socket number is specified.
( E	Command Not Executable	90 6y 41 FF (y: Execution command Socket No. Inquiry command: 0)	Returned when a command cannot be executed due to current conditions. For example, when commands controlling the focus manually are received during auto focus.

#### Camera control commands

x= Camera Address

y= Socket Number

z = Camera Address + 8

All parameter values are in HEX

Command	Function	Command Packet	Comments
AddressSet	Broadcast	88 30 01 FF	Address setting
CAM_Zoom	Stop	81 01 04 07 00 FF	
	Tele(Standard speed)	81 01 04 07 02 FF	-
	Wide(Standard speed)	81 01 04 07 03 FF	-
	Tele(Variable speed)	81 01 04 07 2p FF	p = O(low speed) - F(high speed)
	Wide(Variable speed)	81 01 04 07 3p FF	-
	Direct	81 01 04 47 0p 0q 0r 0s FF	pqrs(0-F): Zoom Position
CAM_Focus	Stop	81 01 04 08 00 FF	



	Far(Standard speed)	81 01 04 08 02 FF	
	Near(Standard speed)	81 01 04 08 03 FF	-
	Far(Variable speed)	81 01 04 08 2p FF	p = 0(low) - F(high)
	Near(Variable speed)	81 01 04 08 3p FF	-
	Direct Focus	81 01 04 48 0p 0q 0r 0s FF	min p = 0, q = 0, r = 0, s = 0
	Position		max p = 0, q = 6, r = E, s = A
	Auto Focus	81 01 04 38 02 FF	AF On/Off
	Manual Focus	81 01 04 38 03 FF	-
	Auto/Manual	81 01 04 38 10 FF	-
CAM_WB	Auto	81 01 04 35 00 FF	Normal Auto
	Indoor mode	81 01 04 35 01 FF	Indoor mode
	Outdoor mode	81 01 04 35 02 FF	Outdoor mode
	OnePush mode	81 01 04 35 03 FF	One Push WB mode
	Manual	81 01 04 35 05 FF	Manual Control mode
	OnePush trigger	81 01 04 10 05 FF	One Push WB Trigger
CAM_RGain	Reset	81 01 04 03 00 FF	Manual Control of R Gain
	Up	81 01 04 03 02 FF	-
	Down	81 01 04 03 03 FF	-
	Direct	81 01 04 43 00 00 0p 0q FF	pq: R Gain
CAM_Bgain	Reset	81 01 04 04 00 FF	Manual Control of B Gain
	Up	81 01 04 04 02 FF	-
	Down	81 01 04 04 03 FF	-
	Direct	81 01 04 44 00 00 0p 0q FF	pq: B Gain



CAM_AE	Full Auto	81 01 04 39 00 FF	Automatic Exposure mode
	Manual	81 01 04 39 03 FF	Manual Control mode
	Shutter priority	81 01 04 39 0A FF	Shutter Priority Automatic
			Exposure mode
	Iris priority	81 01 04 39 0B FF	Iris Priority Automatic Exposure
			mode
	Bright	81 01 04 39 0D FF	Bright Mode(Manual control)
CAM_Iris	Reset	81 01 04 0B 00 FF	Iris Setting (CAM_AE is set to Iris
	Up	81 01 04 0B 02 FF	– Priority)
	Down	81 01 04 0B 03 FF	_
	Direct Iris Position	81 01 04 4B 00 00 0p 0q	min p = 0 q = 0
		FF	max p = 0, q = C
CAM_Gain	Reset	81 01 04 0C 00 FF	Gain Setting
	Up	81 01 04 0C 02 FF	_
	Down	81 01 04 0C 03 FF	-
	Direct	81 01 04 0C 00 00 0p 0q	pq: Gain Position
		FF	
	Gain Limit	81 01 04 2C 0p FF	p: Gain Position
CAM_Bright	Reset	81 01 04 0D 00 FF	Bright Setting
	Up	81 01 04 0D 02 FF	_
	Down	81 01 04 0D 03 FF	_
	Direct	81 01 04 0D 00 00 0p 0q	pq: Bright Position
		FF	
CAM_ExpComp	On	81 01 04 3E 02 FF	Exposure Compensation On/Off
	Off	81 01 04 3E 03 FF	_
	Reset	81 01 04 0E 00 FF	Exposure Compensation Amount
	Up	81 01 04 0E 02 FF	- Setting
	Down	81 01 04 0E 03 FF	-

	Direct	81 01 04 4E 00 00 0p 0q FF	pq: ExpComp Position
CAM_BackLight	On	81 01 04 33 02 FF	Back Light Compensation On/Off
	Off	81 01 04 33 03 FF	-
CAM_NR(2D)Mod	Auto	81 01 04 50 02 FF	ND2D Auto/Manual
е	Manual	81 01 04 50 03 FF	-
CAM_NR(2D)Leve I	-	81 01 04 53 0p FF	p: NR Setting (0: Off, level 1 to 5)
CAM_NR(3D)Leve I	-	81 01 04 54 0p FF	p: NR Setting (0: Off, level 1 to 8)
CAM_Flicker	-	81 01 04 23 0p FF	p: Flicker Settings (0: Off, 1: 50Hz, 2: 60Hz)
CAM_DHotPixel	-	81 01 04 56 0p FF	p: Dynamic Hot Pixel Setting (0: Off, level 1 to 6)
CAM_ApertureM ode(sharpness)	Auto	81 01 04 05 02 FF	Sharpness Auto
	Manual	81 01 04 05 02 FF	Sharpness Manual
CAM_Aperture(sh	Reset	81 01 04 02 00 FF	Aperture Control
arpness)	Up	81 01 04 02 02 FF	-
	Down	81 01 04 02 03 FF	-
	Direct	81 01 04 42 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffec	Off	81 01 04 63 00 FF	Picture Effect Setting
t	B&W	81 01 04 63 04 FF	-
CAM_Memory	Reset	81 01 04 3F 00 pp FF	pp: Memory Number(=0 to 127)
	Set	81 01 04 3F 01 pp FF	-
	Recall	81 01 04 3F 02 pp FF	-
CAM_LR_Reverse	On	81 01 04 61 02 FF	Image Flip Horizontal On/Off
	Off	81 01 04 61 03 FF	-

CAM_PictureFlip	On	81 01 04 66 02 FF	Image Flip Vertical On/Off
	Off	81 01 04 66 03 FF	-
CAM_ColorGain	Diret	81 01 04 49 00 00 00 0p	p: Color Gain setting 0h (60%) to
		FF	Eh (200%)
SYS_Menu	Off	81 01 06 06 03 FF	Turns on/off the menu screen
	On	81 01 06 06 02 FF	-
Pan_tiltDrive	Up	81 01 06 01 VV WW 03 01	VV: Pan speed 0x01 (low speed)
		FF	to 0x18 (high speed)
	Down	81 01 06 01 VV WW 03 02	- WW: Tilt speed 0x01 (low speed)
		FF	YYYY: Pan Position
	Left	81 01 06 01 VV WW 01 03	ZZZZ: Tilt Position
		FF	
	Right	81 01 06 01 VV WW 02 03	-
		FF	
	Upleft	81 01 06 01 VV WW 01 01	-
		FF	
	Upright	81 01 06 01 VV WW 02 01	-
		FF	
	DownLeft	81 01 06 01 VV WW 01 02	-
		FF	
	DownRight	81 01 06 01 VV WW 02 02	-
		FF	
	Stop	81 01 06 01 VV WW 03 03	-
		FF	
	AbsolutePosition	81 01 06 02 VV WW	-
		0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	RelativePosition	81 01 06 03 VV WW	-
		0Y 0Y 0Y 0Y 0Z 0Z 0Z 0Z FF	
	Home	81 01 06 04 FF	-
	Reset	81 01 06 05 FF	-

Pan_tiltLimitSet	LimitSet	81 01 06 07 00 0W	W: 1 UpRight 0: DownLeft
		OY OY OY OY OZ OZ OZ OZ FF	YYYY: Pan Limit Position
	LimitClear	81 01 06 07 01 0W	- ZZZZ: Tilt Position
		07 OF OF OF O7 OF OF OF FF	
CAM_AFSensitivit	High	81 01 04 58 01 FF	AF Sensitivity High/Normal/Low
y	Normal	81 01 04 58 02 FF	-
	Low	81 01 04 58 03 FF	-
CAM_SettingRese t	Reset	81 01 04 A0 10 FF	Reset Factory Setting
CAM_Brightness	Direct	81 01 04 A1 00 00 0p 0q	pq: Brightness Position
		FF	
CAM_Contrast	Direct	81 01 04 A2 00 00 0p 0q	pq: Contrast Position
_		FF	
CAM_Flip	Off	81 01 04 A4 00 FF	Single Command For Video Flip
	Flip-H	81 01 04 A4 01 FF	-
	Flip-V	81 01 04 A4 02 FF	-
	Flip-HV	81 01 04 A4 03 FF	-
CAM_SettingSave	Save	81 01 04 A5 10 FF	Save Current Setting
CAM_Iridix	Direct	81 01 04 A7 00 00 0p 0q	pq: Iridix Position
		FF	
CAM_AWBSensiti	High	81 01 04 A9 00 FF	High
vity	Normal	81 01 04 A9 01 FF	Normal
	Low	81 01 04 A9 02 FF	Low
CAM_AFZone	Тор	81 01 04 AA 00 FF	AF Zone weight select
	Center	81 01 04 AA 01 FF	-
	Bottom	81 01 04 AA 02 FF	-
CAM_ColorHue	Direct	81 01 04 4F 00 00 00 0p	p: Color Hue setting 0h (- 14
		FF	dgrees) to Eh ( +14 degrees





#### Inquiry Commands

- x= Camera Address
- y= Socket Number
- z = Camera Address + 8

All parameter values are in HEX

Inquiry Command			
Command	Command Packet	Packet	Comments
CAM_ZoomPosIn	81 09 04 47 FF	90 50 0p 0q 0r 0s FF	pqrs: Zoom Position
q			
CAM_FocusAFMo deInq	81 09 04 38 FF	90 50 02 FF	Auto Focus
		90 50 03 FF	Manual Focus
CAM_FocusPosIn	81 09 04 48 FF	90 50 0p 0q 0r 0s FF	pqrs: Focus Position
q			
CAM_WBModeIn	81 09 04 35 FF	90 50 00 FF	Auto
q		90 50 01 FF	Indoor mode
		90 50 02 FF	Outdoor mode
		90 50 03 FF	OnePush mode
		90 50 05 FF	Manual
CAM_RGainInq	81 09 04 43 FF	90 50 00 00 0p 0q FF	pq: R Gain
CAM_BGainInq	81 09 04 44 FF	90 50 00 00 0p 0q FF	pq: B Gain
CAM_AEModeInq	81 09 04 39 FF	90 50 00 FF	Full Auto
		90 50 03 FF	Manual
		90 50 0A FF	Shutter priority
		90 50 0B FF	Iris priority
		90 50 0D FF	Bright





CAM_ShutterPosl	81 09 04 4A FF	90 50 00 00 0p 0q FF	pq: Shutter Position
CAM_IrisPosInq	81 09 04 4B FF	90 50 00 00 0p 0q FF	pq: Iris Position
CAM_BrightPosIn q	81 09 04 4D FF	90 50 00 00 0p 0q FF	pq: Bright Position
CAM_ExpCompM	81 09 04 3E FF	90 50 02 FF	On
odelnq		90 50 03 FF	Off
CAM_ExpCompPo sInq	81 09 04 4E FF	90 50 00 00 0p 0q FF	pq: ExpComp Position
CAM_BacklightM	81 09 04 33 FF	90 50 02 FF	On
odeinq		90 50 03 FF	Off
CAM_Nosise2DM odeIng	81 09 04 50 FF	90 50 02 FF	Auto Noise 2D
		90 50 03 FF	Manual Noise 3D
CAM_Nosise2DLe vel	81 09 04 53 FF	90 50 0p FF	Noise Reduction (2D) p: 0 to 5
CAM_Noise3DLev el	81 09 04 54 FF	90 50 0p FF	Noise Reduction (3D) p: 0 to 8
CAM_FlickerMod eInq	81 09 04 55 FF	90 50 0p FF	p: Flicker Settings(0: OFF, 1: 50Hz, 2: 60Hz)
CAM_ApertureM	81 09 04 05 FF	90 50 02 FF	Auto Sharpness
odeInq(Sharpness )		90 50 03 FF	Manual Sharpness
CAM_ApertureInq (Sharpness)	81 09 04 42 FF	90 50 00 00 0p 0q FF	pq: Aperture Gain
CAM_PictureEffec tModeInq	81 09 04 63 FF	90 50 02 FF	Off
		90 50 04 FF	B&W
CAM_MemoryInq	81 09 04 3F FF	90 50 0p FF	p: Memory number last operated.
SYS_MenuModel nq	81 09 06 06 FF	90 50 02 FF	On
		90 50 03 FF	Off





CAM_LR_Reversel	81 09 04 61 FF	90 50 02 FF	On
nq		90 50 03 FF	Off
CAM_PictureFlipI	81 09 04 66 FF	90 50 02 FF	On
nq		90 50 03 FF	Off
CAM_ColorGainIn q	81 09 04 49 FF	90 50 00 00 00 0p FF	p: Color Gain setting 0h (60%) to Eh (200%)
VideoSystemInq	81 09 06 23 FF	90 50 00 FF	1920x1080i60
		90 50 01 FF	1920x1080p30
		90 50 02 FF	1280x720p60
		90 50 04 FF	NTSC
		90 50 05 FF	NTSC
		90 50 06 FF	NTSC
		90 50 07 FF	1920x1080p60
		90 50 08 FF	1920x1080i50
		90 50 09 FF	1920x1080p25
		90 50 0A FF	1280x720p50
		90 50 0C FF	PAL
		90 50 0D FF	PAL
		90 50 0E FF	PAL
Pan-	81 09 06 11 FF	90 50 ww zz FF	ww: Pan Max Speed
tiltMaxSpeedInq			zz: Tilt Max Speed
Pan-tiltPosInq	81 09 06 12 FF	90 50 0w 0w 0w 0w	wwww: Pan Position
		Oz Oz Oz Oz FF	zzzz: Tilt Position
CAM_GainLimitIn q	81 09 04 2C FF	90 50 0q FF	p: Gain Limit
CAM DHotPixelln	81 09 04 56 FF	90 50 0a FF	p: Dynamic Hot Pixel Setting (0.
q			Off, level 1 to 6)
	81 09 04 58 FF	90 50 01 FF	High



CAM_AFSensitivit		90 50 02 FF	Normal
ylnq		90 50 03 FF	Low
CAM_BrightnessI	81 09 04 A1 FF	90 50 00 00 0p 0q FF	pq: Brightness Position
CAM_ContrastInq	81 09 04 A2 FF	90 50 00 00 0p 0q FF	pq: Contrast Position
CAM_FlipInq	81 09 04 A4 FF	90 50 00 FF	Off
		90 50 01 FF	Flip-H
		90 50 02 FF	Flip-V
		90 50 03 FF	Flip-HV
CAM_IridixInq	81 09 04 A7 FF	90 50 00 00 0p 0q FF	pq: Iridix Position
CAM_AFZone	81 09 04 AA FF	90 50 00 FF	Тор
		90 50 01 FF	Center
		90 50 02 FF	Bottom
CAM_ColorHueIn	81 09 04 4F FF	90 50 00 00 00 0p FF	p: Color Hue setting 0h (- 14
q			degrees) to Eh ( +14 degrees)
CAM_AWBSensiti vityInq	81 09 04 A9 FF	90 50 00 FF	High
		90 50 01 FF	Normal
		90 50 02 FF	Low



# **Appendix B Dimensions**

Rear

Side

Front



2 42 12- $\bigcirc$ -3 11 T LINE IN 4 1004000 9 -5 Õ æ 87 6

Тор



Bottom

All sizes are in mm

Weight: 0.85 kg



www.avonic.eu

